



**Quick Set-up Guide for Optional/Additional
DECT 6.0 Cordless Handset
for use with Systems 2111 and 2112 Series**

**Please read this manual before operating
product for the first time.**

Visit the RCA web site at www.rca4phones.com

Model 2110

Equipment Approval Information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

1 Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

US Number is located on the cabinet bottom.

REN Number is located on the cabinet bottom.

2 Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

Privacy of Communications may not be ensured when using this product. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is “receiving” the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, “How To Identify and Resolve Radio/TV Interference Problems.” This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Hearing Aid Compatibility (HAC)

This telephone system meets FCC standards for Hearing Aid Compatibility.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied with this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Information for DECT Product



This telephone is compliant with the DECT 6.0 standard which operates in the 1.92GHz to 1.93GHz frequency range. Installation of this equipment is subject to notification and coordination with UTAM. Any relocation of this equipment must be coordinated through and approved by UTAM. UTAM may be contacted at 1-800-429-8826.

Table of Contents

Equipment Approval Information.....	2
Interference Information.....	3
Hearing Aid Compatibility (HAC).....	4
FCC RF Radiation Exposure Statement	4
Information for DECT Product.....	4
Introduction.....	6
Before You Begin.....	6
Parts Checklist (for Model 2110).....	6
Installation.....	7
Digital Security System.....	7
Important Installation Guidelines...7	
Base Layout.....	8
Handset Layout.....	9
Display icons.....	9
Installing the Phone.....	10
Installing the Handset Battery	10
Handset Charging Cradle.....	11
Programming the Telephone.....	11
Initial Setup.....	11
Handset Name.....	11
Registration.....	12
De-Registration.....	12
Global De-registration.....	13
Intercom Operation.....	14
Making an Auto Intercom Call.....	14
NOTE.....	14
Receiving an Intercom Call.....	14
Advanced Intercom Features.....	15
Using Intercom with	
External Telephone Calls.....	15
Two-Way Calling.....	15
Three-Way Calling.....	15
Transferring External	
Calls to Other Handsets.....	16
Battery Safety Precautions.....	16
Causes of Poor Reception.....	16
General Product Care.....	17
Warranty Assistance.....	17
Limited Warranty.....	18

Industry Canada (I.C.) Notice

This product meets the applicable Industry Canada technical specifications.
Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada."

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5."

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVETHESEINSTRUCTIONS

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

Introduction




CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

Before You Begin

Parts Checklist

Make sure your package includes the items listed here.

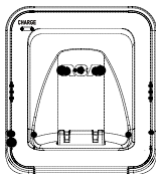

Base



Handset



AC power
adaptor



Battery
compartment
cover



battery pack

Installation


Digital Security System

Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.


INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave oven, or VCR. If such interference continues, move the cordless telephone farther away from these appliances.

Certain other communications devices may also use the 1.9 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone.

Base Layout

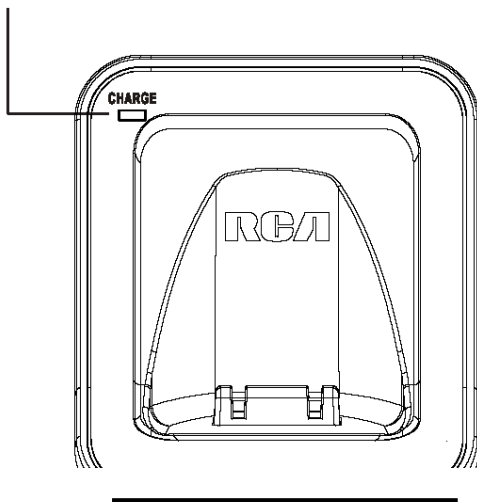

HandsetLayout

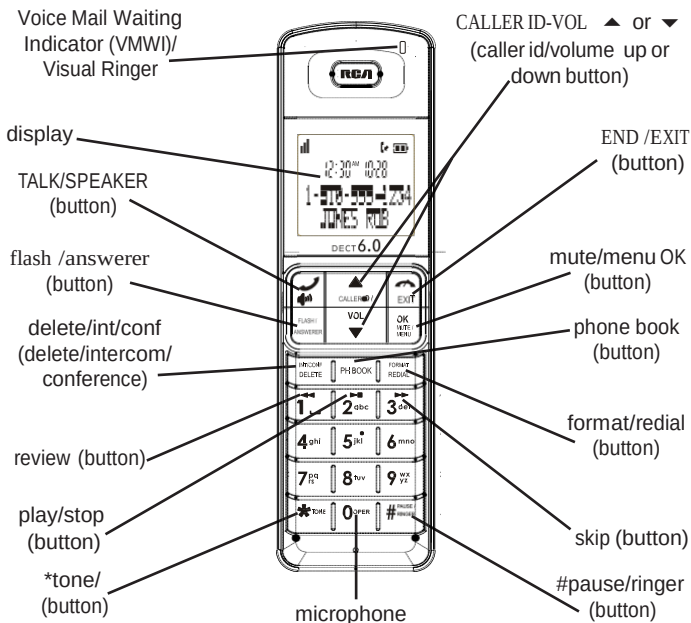

Display icons

	Signal strength		Alarm ON
	Speakerphone		New Call
	Message		Battery
	Voicemail	AM	AM
	SMS	PM	PM
	Ringer OFF/DND ON		

Note: Answering features are applied to 2112 series only

If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.

Important Installation Guidelines

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

Installing the Phone

Installing the Handset Battery


NOTE: You must connect the handset battery before use.



CAUTION: To reduce the risk of fire or personal injury, use only the approved Nickel-metal Hydride battery (Ni-MH) packed with the unit. Nickel metal Hydride battery (Ni-MH) battery (Brand name: SANIK, Model name: 2SN-AAA55H-S-J1, Capacity: 2.4V/550mAh; Brand name: BYD, Model name: H-AAA550BX2, Capacity: 2.4V/550mAh; Brand name: CORUN, Model name: NI-MH AAA550, Capacity: 2.4V/550mAh.), that is compatible with this unit.

1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.
2. Locate the battery compartment on the back of the handset.
3. Plug the battery pack cord into the jack inside the compartment.

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

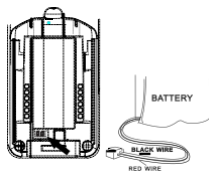

4. Insert the battery pack.
5. Close the battery compartment by pushing the door up until it snaps into place.

Handset Charging Cradle

1. Plug the AC power converter of the charging cradle into the electrical outlet.

CAUTION: To reduce risk of personal injury, fire, or damage use only the power adaptor (Manufacturer: ESL, Type: IA5060, 120Vac/6Vdc/500mA; Manufacturer: NanTong DaMing, Type: DM-SC060058, 120Vac/6Vdc/0-0.58A) listed in the user's guide. This power adaptor is intended to be correctly orientated in a vertical or floor mount position.

2. Place the handset in the charging cradle. The charge indicator turns on, verifying the battery is charging.
3. Allow the phone to charge for 16 hours prior to first use.

Programming the Telephone

Initial Setup

1. Make sure your phone is **OFF** (not in TALK mode).
2. Press the **mute/menu** OK button to go to the main menu.
3. Press **caller ID-volume** (▲ or ▼) button to scroll to **INITIAL SETUP**.
4. Press the **mute/menu** OK button to confirm and you may program the following items:

Handset Name, Registration, Deregistration, and Global De-registration.

NOTE: During programming, you may press the **END /EXIT** button at any time to exit the sub-menu and return to the menu.

Handset Name

From the Initial Setup Menu:

1. Press the **caller ID-volume** (▲ or ▼) button to scroll to the **HANDSET NAME** sub-menu.
2. Press **mute/menu** OK button to enter the menu. The screen displays **HANDSET NAME**.
3. Use the touch-tone pad to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once

for the letter M; press the 4 key 3 times for the letter I; press the 8 key for the letter T; press the 4 key twice for the letter H.

NOTE: If you make a mistake, use the delete/int/conf button to backspace and delete one character at a time.

4. Press the mute/menu OK button to save your name. You will hear a confirmation tone and the handset name shows in the display.

Registration

1. Your packaged handset(s) are pre-registered and ready to use. It is not recommended that a handset be registered again unless absolutely necessary.

From the Initial Setup Menu:

1. Press the caller **ID-volume** (▲ or ▼) button to scroll to the **REGISTRATION** sub-menu.
2. Press the **mute/menu** OK button to enter the menu. **YES or NO** shows in the display. The default setting is NO.
3. Use the caller **ID-volume** (▲ or ▼) button to scroll to **YES or NO**.
4. If you select **YES**, press the **mute/menu** OK button. **HOLD BASE FIND FOR 5 SECONDS**,

THEN PRESS MENU OK KEY shows in the display. (Your handset should be held near the base during registration process.)

5. Press and hold the **find** button on the base unit, the charge/in use indicator flashes.

Press the handset **mute/menu** OK button. **REGISTERING** shows in the display. **REGISTERED** shows in the handset's display. You may now rename your handset.

(Refer to Step 3 & 4 of Handset Name Section)

NOTE: If you are re-registering the handset through the handset menu; to rename your handset you must go to the Handset Name Section and start from the beginning step.

De-Registration

De-registration cancels registration. During the de-registration process, keep the handset near the base.

From the Initial Setup Menu:

1. Press the caller **ID-volume** (▲ or ▼) button to scroll to the **DEREGISTRATION** sub-menu.
2. Press the **mute/menu** OK button to enter the menu. **YES or NO** shows in the display, the default setting is NO.
3. Use the **caller ID-volume** (▲ or ▼) button to scroll to **YES or NO**.



WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

4. Select **NO**, if you do not want to de-register.
5. If you select **YES**, press the mute/menu OK button and **MOVE NEAR BASE** displays for seconds, then YES NO appears in the display.
6. Use the **caller ID-volume** (▲ or ▼) button to scroll to **YES** or **NO**.
7. If you select **YES**, press the **mute/menu** OK button to confirm. **DE-REGISTER...** shows in the display. You will hear a confirmation tone. Then **DEREGISTERED** shows in the display to confirm the handset is deregistered.

NOTE: When you complete the de-registration process, **HANDSET NEEDS REGISTRATION** shows in the display. To use the handset, you **MUST** re-register the handset using the Registration process.

Global De-registration

If one or more handsets become lost, you should de-register all handsets to ensure proper system operation.



WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

1. Disconnect power from the base by pulling the plug out of the back of the unit.
2. Press and hold the **find** button and while holding the **find** button reconnect the power.
3. Continue to hold the **find** button until the charge/in use light flashes rapidly.
4. Release the **find** button.
5. Press and release the **find** button on the base once. All handsets are de-registered and **HANDSET NEEDS REGISTRATION** shows in the display.

Intercom Operation

(applicable only with additional handsets)

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still receive incoming calls.

Making an Auto Intercom Call

1. Make sure the handset is **OFF** (not in TALK mode).
2. Press the **delete/int/conf** button on the handset.
3. Use the touch-tone pad to select the handset you want to page.

NOTE:

- a) If the user has not entered the paged handset number within a few seconds, the handset shall display a paged handset number list (i.e. Handset 2, Handset 3, Handset 4,) if Handset 1 is paging the handset.
 - b) Even if the handset has not been registered with all 4 handsets, the paging list will display all handset numbers.
 - c) If the user has selected a paged handset number that has not been registered, the handset will emit an error tone and ask the user to retry again.
4. A short page tone is heard and then the two handsets are immediately connected.

Receiving handset shall immediately come into the auto intercom mode that both “microphone” and “speaker” of this receiving handset shall be enabled such that the user of receiving handset can freely talk and listen to the conversation.

5. When finished, press the EXIT button or **delete/int/conf** button on either handset to deactivate the intercom.

NOTE: The system is expandable up to 4 handsets (by purchase of optional Model 2110 handset with recharge cradle). When 4 handsets are registered, the system can handle 2 separate intercom operations at once, for example, 1st handset intercoms with 2nd handset while 3rd handset intercoms with 4th handset .

Receiving an Intercom Call

When you receive an intercom call, your handset beeps. To answer the call press the **delete/int/conf** button or TALK/SPEAKER button.

Advanced Intercom Features

Receiving an Incoming Call During an Intercom Call

If you receive a telephone call during an intercom call, an incoming call alert tone will be heard (through the earpiece or speaker). If the user wants to answer an incoming call, they must press **END** to terminate the intercom and receive an incoming ring.

Using Intercom with External Telephone Calls

During a telephone call, you may use the intercom/paging function to page another handset and have an off line, private (two-way) intercom conversation. You may also have a three-way conversation between the external caller and the handsets, or you may transfer the external telephone call to another handset.

NOTE: Before you intercom/page another handset, you must decide whether you want to create a two-way or a three-way conversation.

Two-Way Calling

1. During an external call, press the delete/int/conf button, and use the touch-tone pad to enter the handset number to put an external line on hold. The user may then auto intercom with the paged handset.

NOTE: Both intercom users may speak privately. The external caller will not hear the intercom conversation.

2. When finished, press the END button to end the intercom call, return to the talk mode, and resume your original telephone conversation.

Three-Way Calling

1. During an external call, press the **delete/int/conf** button. **LINE ON HOLD EXTENSION?** shows in the display.
2. Use the touch-tone pad to select Handset # to enter into auto intercom call with paged handset.
3. When the receiving handset connects, press the **delete/int/conf** button on the originating handset to conference with the receiving handset and the external caller. **CONFERENCE** shows in the display on the originating and receiving handsets.

NOTE: A handset can enter conference mode directly by pressing TALK/SPEAKER on the second handset during a call.

Transferring External Calls to Other Handsets

During an external call, you may transfer the external call to another handset.

1. Press the **delete/int/conf** button on the originating handset to put an external call on hold, and enter the paged handset number.
2. A long beep is heard and then the two handsets are immediately connected.

Receiving handset shall immediately come into the auto intercom mode that both “microphone” and “speaker” of this receiving handset shall be enabled such that the user of receiving handset can freely talk and listen to the conversation.

3. When the receiving handset connects, press the END button on the originating handset to transfer the call.

Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the Nickel-metal Hydride battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

General Product Care

To keep your telephone working and looking good, follow these guidelines:

- Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the unit and other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a soft cloth.

Warranty Assistance

Your sales receipt will be required to demonstrate proof of purchase in order to validate your warranty eligibility. You may want to attach either the original, or a photocopy, of your sales receipt to this booklet for future reference.

If this product was received as a gift, it is suggested you jot down the date of gift receipt, as this information will be valuable should service be required during the warranty period. If the equipment is causing harm to the telephone network, the telephone company may require that you disconnect the equipment until the problem is resolved.

Purchase Date or Date Received as Gift _____

Name of Store _____

For instructions on how to obtain warranty service, you may call Customer Care at 1-877-722-4908 or you may visit our website at www.rca4phones.com. If you prefer, you may write to us at:

Supreme Power USA LLC
PO Box 501045
Indianapolis IN 46250-1045

Please do not send products to this address as it only adds delays in service and may result in lost or damaged product. This PO BOX is for written communication only.

If the equipment is causing harm to the telephone network, the telephone company may require that you disconnect the equipment until the problem is resolved.

Limited Warranty

What your limited warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year, from date of purchase. Please retain your sales receipt, as that will act as your proof of purchase in order to validate warranty status.

What we will do:

- Provide you with a new or, at our option, a refurbished exchange unit of same or similar model. The exchange model is under warranty for the remainder of the original product's one year warranty, or 90 days from the date the replacement product was shipped to you, whichever is longer.

How to get service:

- Call Customer Care at 1-877-722-4908. Please have your product with you and please have your model number and date code available when calling us. The model number and date code can be found on the underside of the base unit.

If you are within your limited warranty period and it is determined that service is required:

- We will ask that you properly pack your product to avoid shipping damage. We recommend that you use the original carton and packing materials.
- We will ask you to include with your product the following:
 - Your name, return shipping address and daytime phone number handwritten or typed on a sheet of paper
 - A legible copy of your sales receipt (please do not send the original sales receipt)
- Ship your product prepaid, to the address we provide. We suggest shipping your product via a traceable carrier, as we are not responsible for lost, mis-directed or damaged shipments. You may want to write the date shipped, carrier and tracking number here: _____
- Upon receipt of your product we will validate your product is under warranty and if determined your product is warranty eligible, we will ship to you a new or, at our option, a refurbished exchange unit of same or similar model. This exchange unit will be shipped to you at no cost.

What your limited warranty does not cover:

- Customer Instruction. (Your Owner's Manual provides information regarding operating and install instructions. Additional information may be obtained by contacting the retailer)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse, neglect, unauthorized repair.
- Products which have been modified or incorporated into other products
- Products that have been serviced by an unauthorized servicer.
- Products purchased or serviced outside the USA or Canada.
- Acts of nature, such as but not limited to, lightning damage.

Limitation of Warranty:

- THIS LIMITED WARRANTY IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY SUPREME POWER USA LLC, ITS AGENTS, EMPLOYEES, RETAIL DEALERS OR INDEPENDENT CONTRACTORS SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SUPREME POWER USA LLC SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA or Canada:

This warranty does not apply. Contact your dealer for warranty information.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product or visit www.rca4phones.com to register your new product . Product registration is not required for warranty coverage but does allow us to contact you should it be necessary.

Visit the RCA web site at www.rca4phones.com

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.